

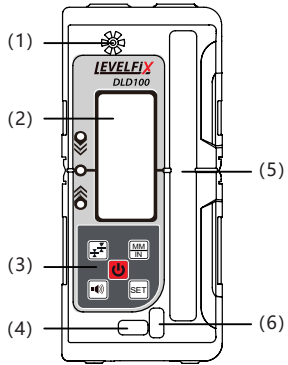
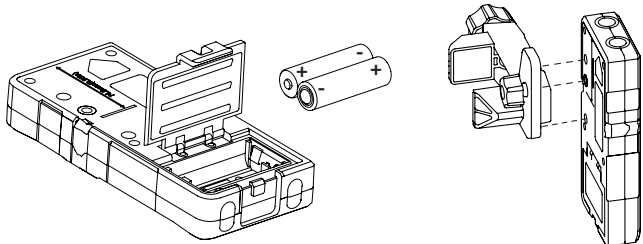
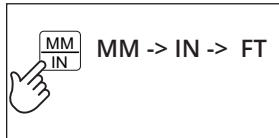


# X Receiver DLD100GR

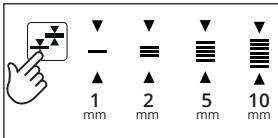

1. Buzzer
2. Display
3. Key pad
4. Horizontal vial
5. Detection window
6. Vertical vial

- On/Off
- Unit
- Buzzer volume
- Zero setting
- Accuracy

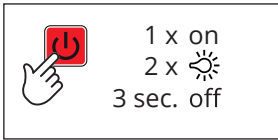

! USER MANUAL CAN BE DOWNLOADED AT:  
[www.levelfixinstruments.com/downloads](http://www.levelfixinstruments.com/downloads)



**LEVELFIX**  
 LASER INSTRUMENTS

This instrument is powered by  
**Connect**  
 The smart connection with your mobile device



**Instructions - Instructies - Instructions:**

- Download the Levelfix connect app and read the user manual before you use the instrument.
- Download the Levelfix connect app en lees de gebruiksaanwijzing voor u het instrument in gebruik neemt.
- Téléchargez l'application Levelfix connect et lisez le manuel d'utilisation avant d'utiliser l'instrument.
- Always check the accuracy of the instrument before carrying out any substantial work.
- Controleer altijd de nauwkeurigheid van het instrument voor het begin van uw werkzaamheden.
- Vérifiez toujours la précision de l'instrument avant début de votre travail.

**Safety:**

Carefully read the Safety instructions and product manual before using the product. The person responsible for the instrument must ensure that all users understand and adhere to these instructions.

**Caution:**

While the instrument is in operation, be careful not to expose eyes to the emitting laser beam. Exposure to a laser beam for an extended time may be hazardous to the eyes.



1. Vertical beam
2. Horizontal beam
3. Keypad
4. Battery


5. Charging jack
6. Alignment sight
7. Digital display
8. 5/8" connection

**WWW.LEVELFIXINSTRUMENTS.COM**  
 INNOVATIVE - ACCURATE - DURABLE - 4 YEARS WARRANTY

**QUICK GUIDE**



## X Keypad - LED

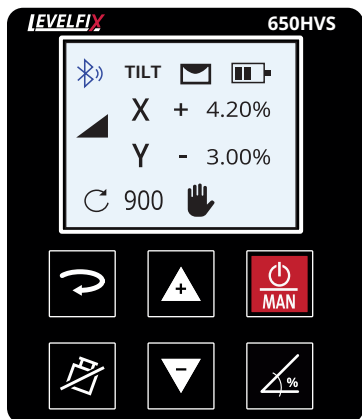

On-Off/Manual

TILT On-Off

Rotation speed

Slope On-Off  
X or Y slope

Slope Up  
Vert. beam left

Slope Down  
Vert. beam right

Bluetooth connection

Rotating speed

TILT On

Manual On

TILT Activated (shock)

Out of Level!

Leveling

Vertical alignment

Battery power

X Slope setting X axis  
 Y Slope setting Y axis

## X Auto/Manual mode

3 sec. → Man. mode

3 sec. → Auto. mode

## X TILT mode - Auto On

TILT On → TILT → On

TILT OFF/ON


## X Rotation mode

300 - 600 - 900 - 0 rpm

## X Battery

Battery low - Charge battery

Battery full

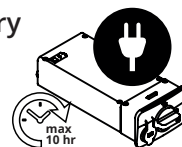

## X Out of Level!

Off → On

## X Vertical alignment

Vertical line Left Vertical line Right

## X Slope function

Set X → Set X+ % → Set X- %  
 Set Y → Set Y+ % → Set Y- % →

### Zero set

Set X → 0 % Set Y → 0 %

### Remote RCD650

BT connection Other keys same function as keypad

! use TILT in Slope mode for more safety!